

M I R A G E
(MIRAGE GRANDE)
SHISHA USER GUIDE

www.medusepipes.com

1. WATER FILLING


- > Fill both shisha (hookah) glass parts with water as shown in the picture:
shisha corpus: approx 0,7 l
stand Mirage: approx 10 l
stand Mirage Grande: approx a 17,5 l

! Use distilled water to fill the glass stand to prevent sedimentation of the glass with mineral sediments and the shisha stays clean for a long time.

! Make sure the water surface never exceeds the level marked in the picture.

! Always replace water in the shisha corpus after smoking.

Tip: Use cool water and several ice cubes to make the smoke much finer.

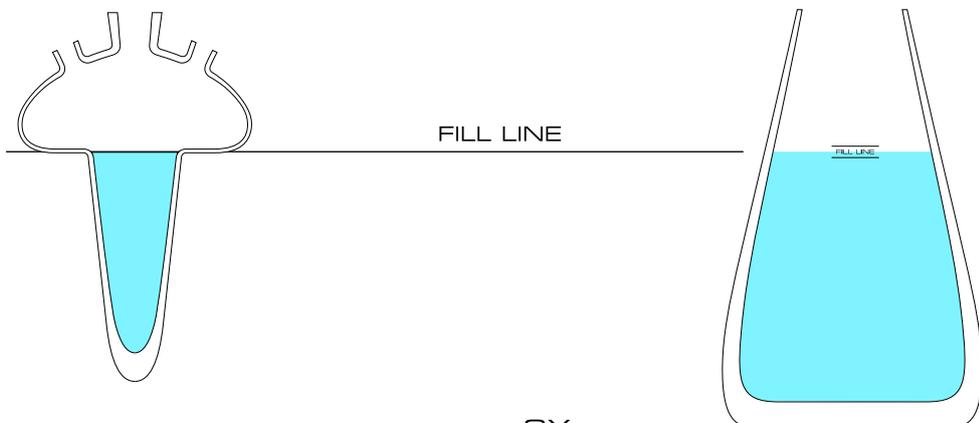

2. SHISHA (HOOKAH) SETUP WATER COLOURING

- > Add 10 spoons of blue dye in the distilled water in Mirage stand (17 spoons for Mirage Grande). Both dyes are food certified.

- > Add 2 spoons of yellow dye in the corpus water

! Use always the same spoon for each dye to prevent mixing a different shade.


- > Place the shisha glass corpus in the glass stand, so that there would be a safe silicone spacer pulled over the bottom side of the shisha corpus in between the both parts.

- > If you have the shisha with Chameleon lamp, place the shisha onto the lamp. Good shisha stability stays unaffected.

! If you use Chameleon lamp, never colour the distilled water in the shisha stand, so that the colour spectrum may glow in all its splendour.

- > Total height Mirage: 65 cm / 25.6"

- > Total height Mirage Grande: 90 cm / 35.4"

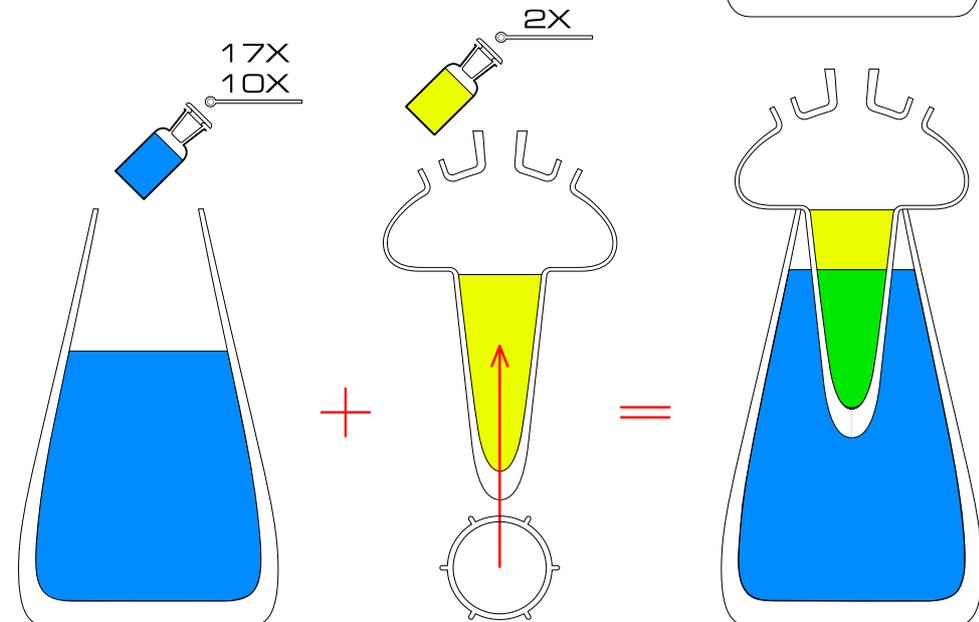

3. WASHABLE HOSE SETUP

- > Screw the hose holder (4) in between the rotary hose socket (1) and the joint connector (2. "Classic" or 3. "Comfort").

! The rotary hose socket (1) allows free, circling movement around the shisha pipe without affecting its stability (for example when sharing a single hose by more users).

- > Screw the hose glass handle (5) in the other NON-rotary hose socket.

- > A male plastic tip may be inserted into the hose handle.


Hose types:

- > **Hose "Classic":**
a hose equipped with a joint connector "Classic"
- without a check-valve.

- > **Hose "Comfort":**
a hose equipped with a joint connector "Comfort"
- with a built-in check-valve.

Tip: The high quality silicone filling in the hose allows to use the very same hose for different kinds of flavored tobacco without undesirable mixing of individual tastes.

- > Hose length: 170 cm / 66.9"

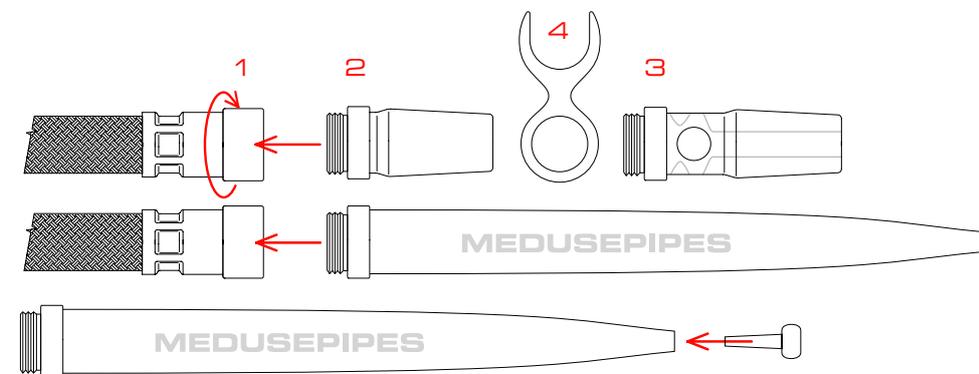

4. SHISHA CORPUS SETUP

- > Put the head through the stainless steel tray into the upper ground glass mouth of the shisha corpus.


- > According to your need and individual shisha type, insert the following into the smoothed side openings of glass corpus:
1. hose "Comfort", 2. hose "Classic", 3. air valve, 4. (blinding) plug.

! Make sure the joint connectors are screwed in the rotary hose socket. If not, permanent damage of the glass corpus may occur!

Individual Shisha (Hookah) Types:

- > **Mono:** a shisha with a hose "Classic" equipped with an air valve.
- > **Duality Classic:** a shisha with two hoses "Classic" equipped with an air valve.
- > **Trinity Classic:** a shisha with three hoses "Classic" equipped with an air valve and a (blinding) plug.
- > **Duality Comfort:** a shisha with two hoses "Comfort" equipped with a (blinding) plug.
- > **Trinity Comfort:** a shisha with three hoses "Comfort" equipped with two (blinding) plugs.

Tip: An air valve may be also used as a (blinding) plug.

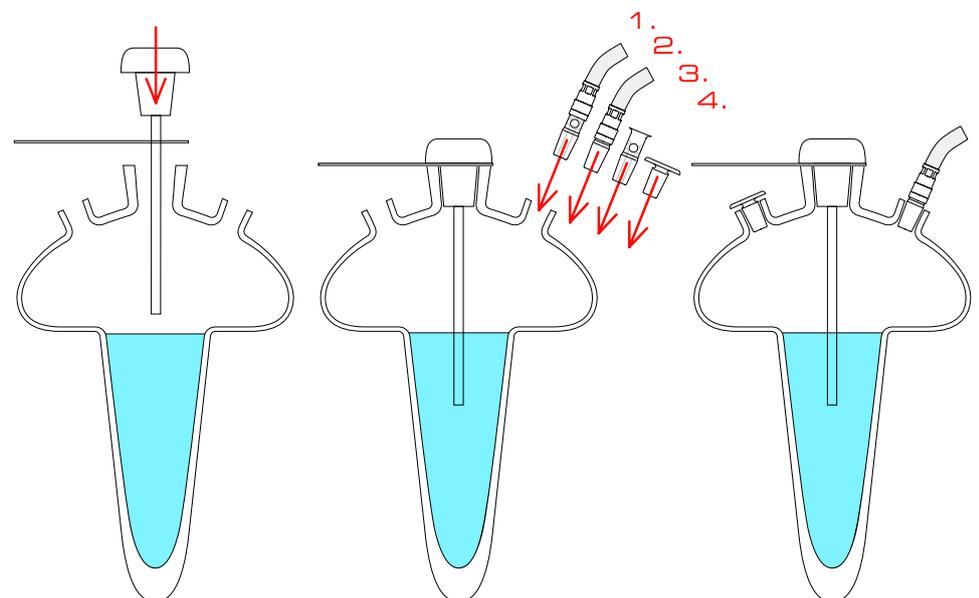

5. HEAD (BOWL) SETUP

> Screw the glass tube into the head and insert the lower stainless steel screen filter into the head.

> Fill the head with flavored tobacco:

1. **Standard head** (Lebanese type):
volume: 7-10g = 50-70 min. of smoking.

2. **Extra large head** (Egyptian type):
volume: 20-25g = 70-100 min. of smoking.

> 3. Use a stainless steel tobacco tamper to spread tobacco evenly along the whole head (extra large head only) surface to make it levelled.

! Do not compact the tobacco hard, but place it gently inside the head, so that an even shisha draught is not affected.

> Put the upper stainless steel screen filter for coal into the head.


! Make sure there is a hole of approx 2 mm in between the tobacco layer and the upper screen filter, so that tobacco is not burned onto the lower side of the upper screen filter.

> Heat up the charcoal red (recommended natural coal made from coconut shells or olive wood) and insert it into the upper screen filter.


> The head reaches its optimum operating temperature in 2 min. and the shisha is ready to be smoked.

Tip: The tobacco tamper is designed to be used also for carrying and serving hot charcoal into the prepared shisha head.

1. Standard head

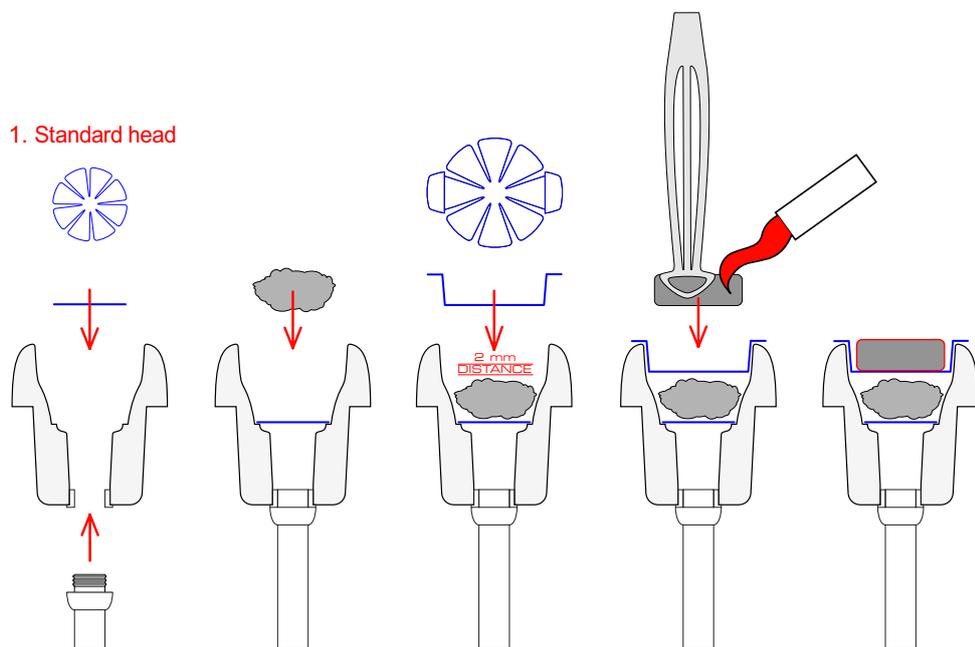

2. Extra large head

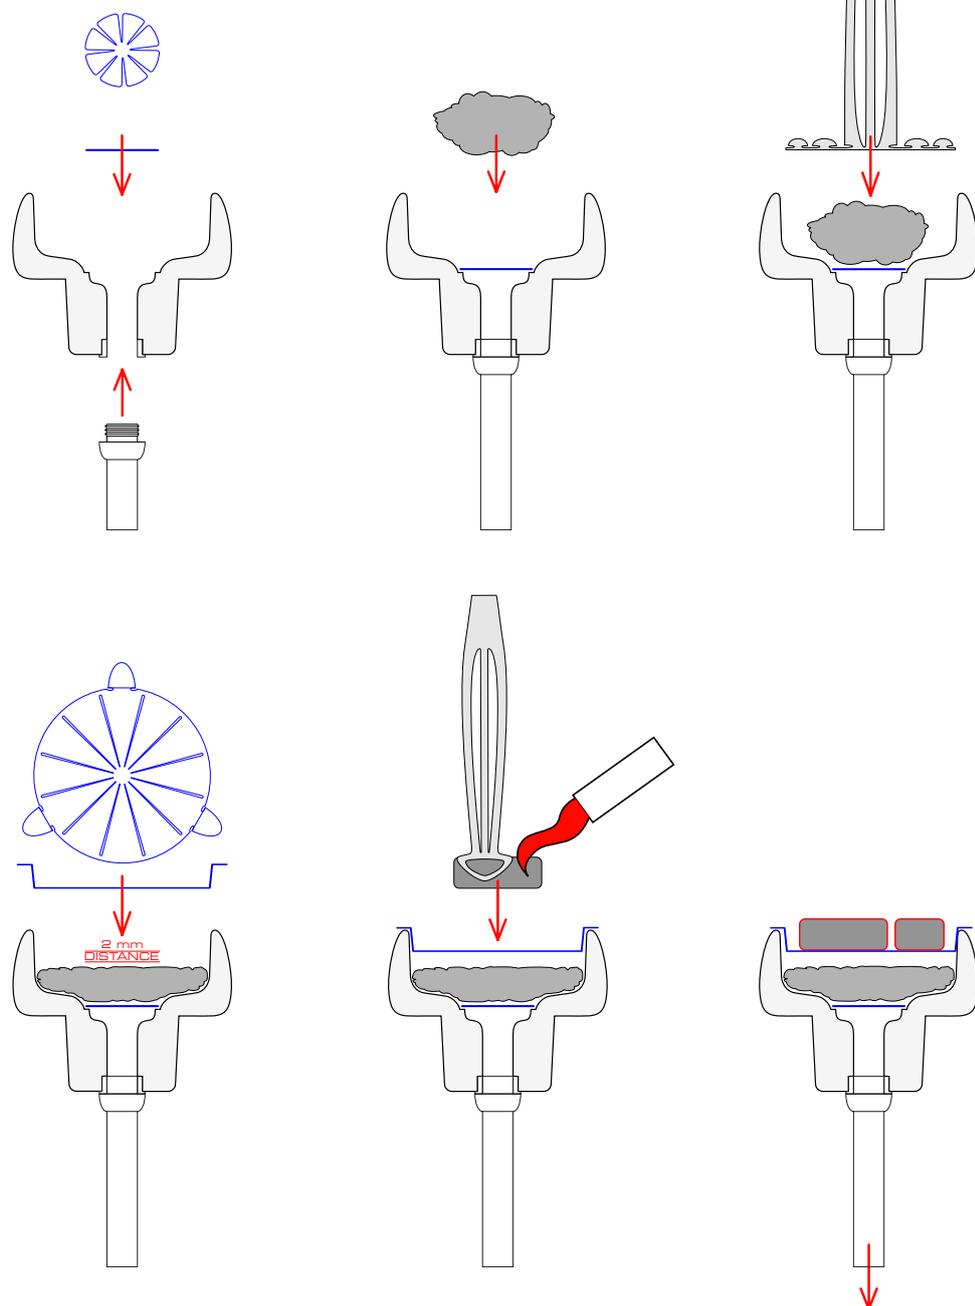

6. SMOKE REMOVAL FROM SHISHA


> If a running shisha is not used for a while (more than about 3 min.), the accumulated smoke becomes unpleasant and needs to be removed from the shisha corpus:

> **1. "Comfort" version:**

Pull out two hoses out of the shisha corpus and blow out the corpus through the side openings.

> **2. "Classic" version:**

Blow out the shisha corpus with the use of the hose. The accumulated smoke in the shisha is removed through the air valve.

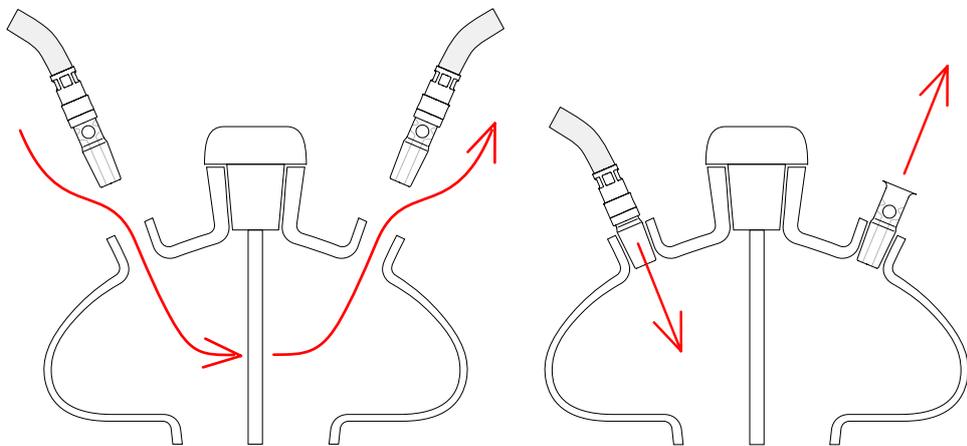


7. AFTER SMOKING...

> After smoking remove the remains of charcoal out of the head and leave the shisha cool down for at least 30 min. Only afterwards the shisha is ready to be cleaned or its water replaced.

! When handle a hot shisha, its permanent damage may occur or you may get burned by the hot head.

> To remove the head from a cooled down (!) shisha use the stainless steel tray following the procedure described in the picture.

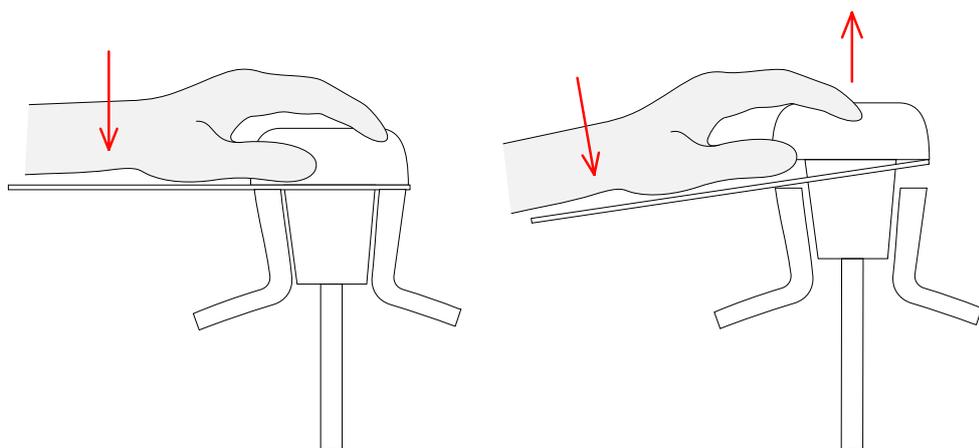

8. CLEANING

> To clean the shisha glass corpus use approx 1 spoonful of a cleaning agent "Cleaner".

> Produce thick foam with the use of a big brush (1.) and clean the corpus inner side with circling movements.


> Handle brush (2.) is designed to clean the glass handle. Again, use Cleaner.

> Smaller head brushes (3.) are designed for the head tube cleaning. Again apply Cleaner.

> Use the scrubbing pad (4.) only to remove burnt impurity inside the shisha head.

> If necessary, "Comfort" version hose joint connector and an air valve may be cleaned in plastic boxes (5.) by submerging them into water with Cleaner. Shake the box thoroughly after approx 12 hours. Wash the glass component in a stream of water and leave to dry.


> The hose may be washed by water together with the cleaning agent anytime. The silicone filling of the hose makes it highly resistant and meet high hygiene requirements.

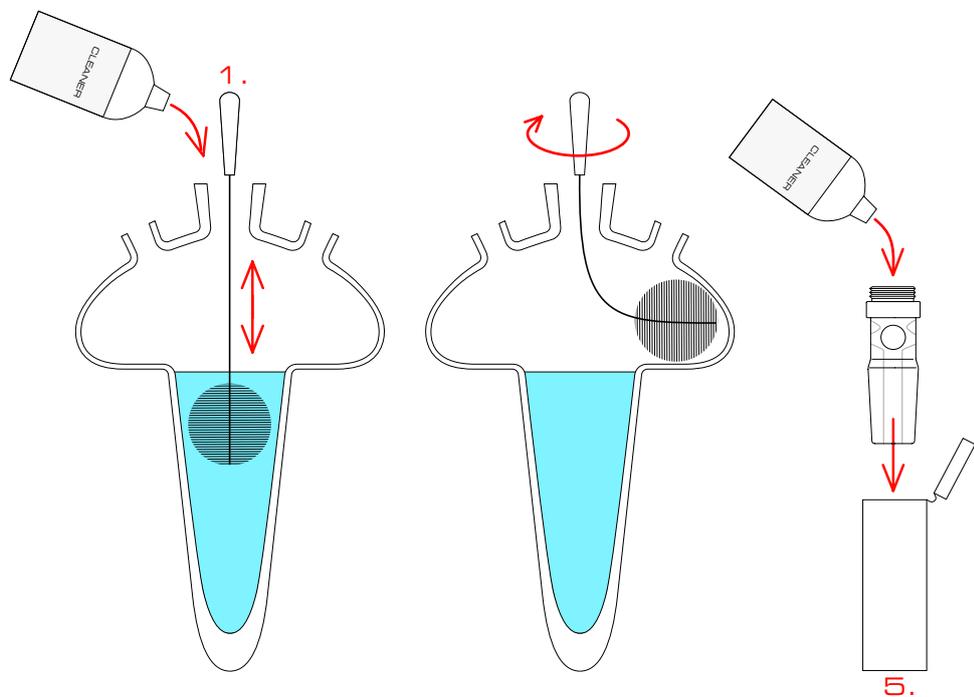


9. ON-LINE REGISTRATION

> Check the manufacturing number of your shisha on MEDUSE DESIGN website (www.medusepipes.com).

> After registration you have access to information and interesting offers only available to club members.

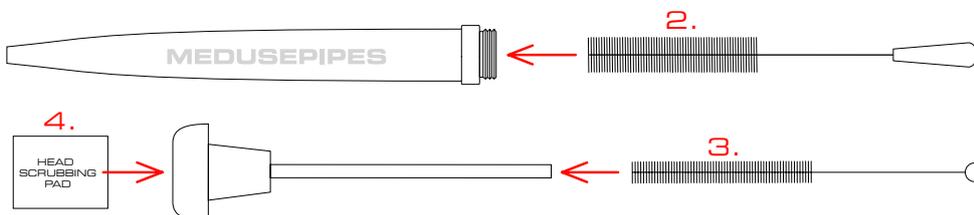

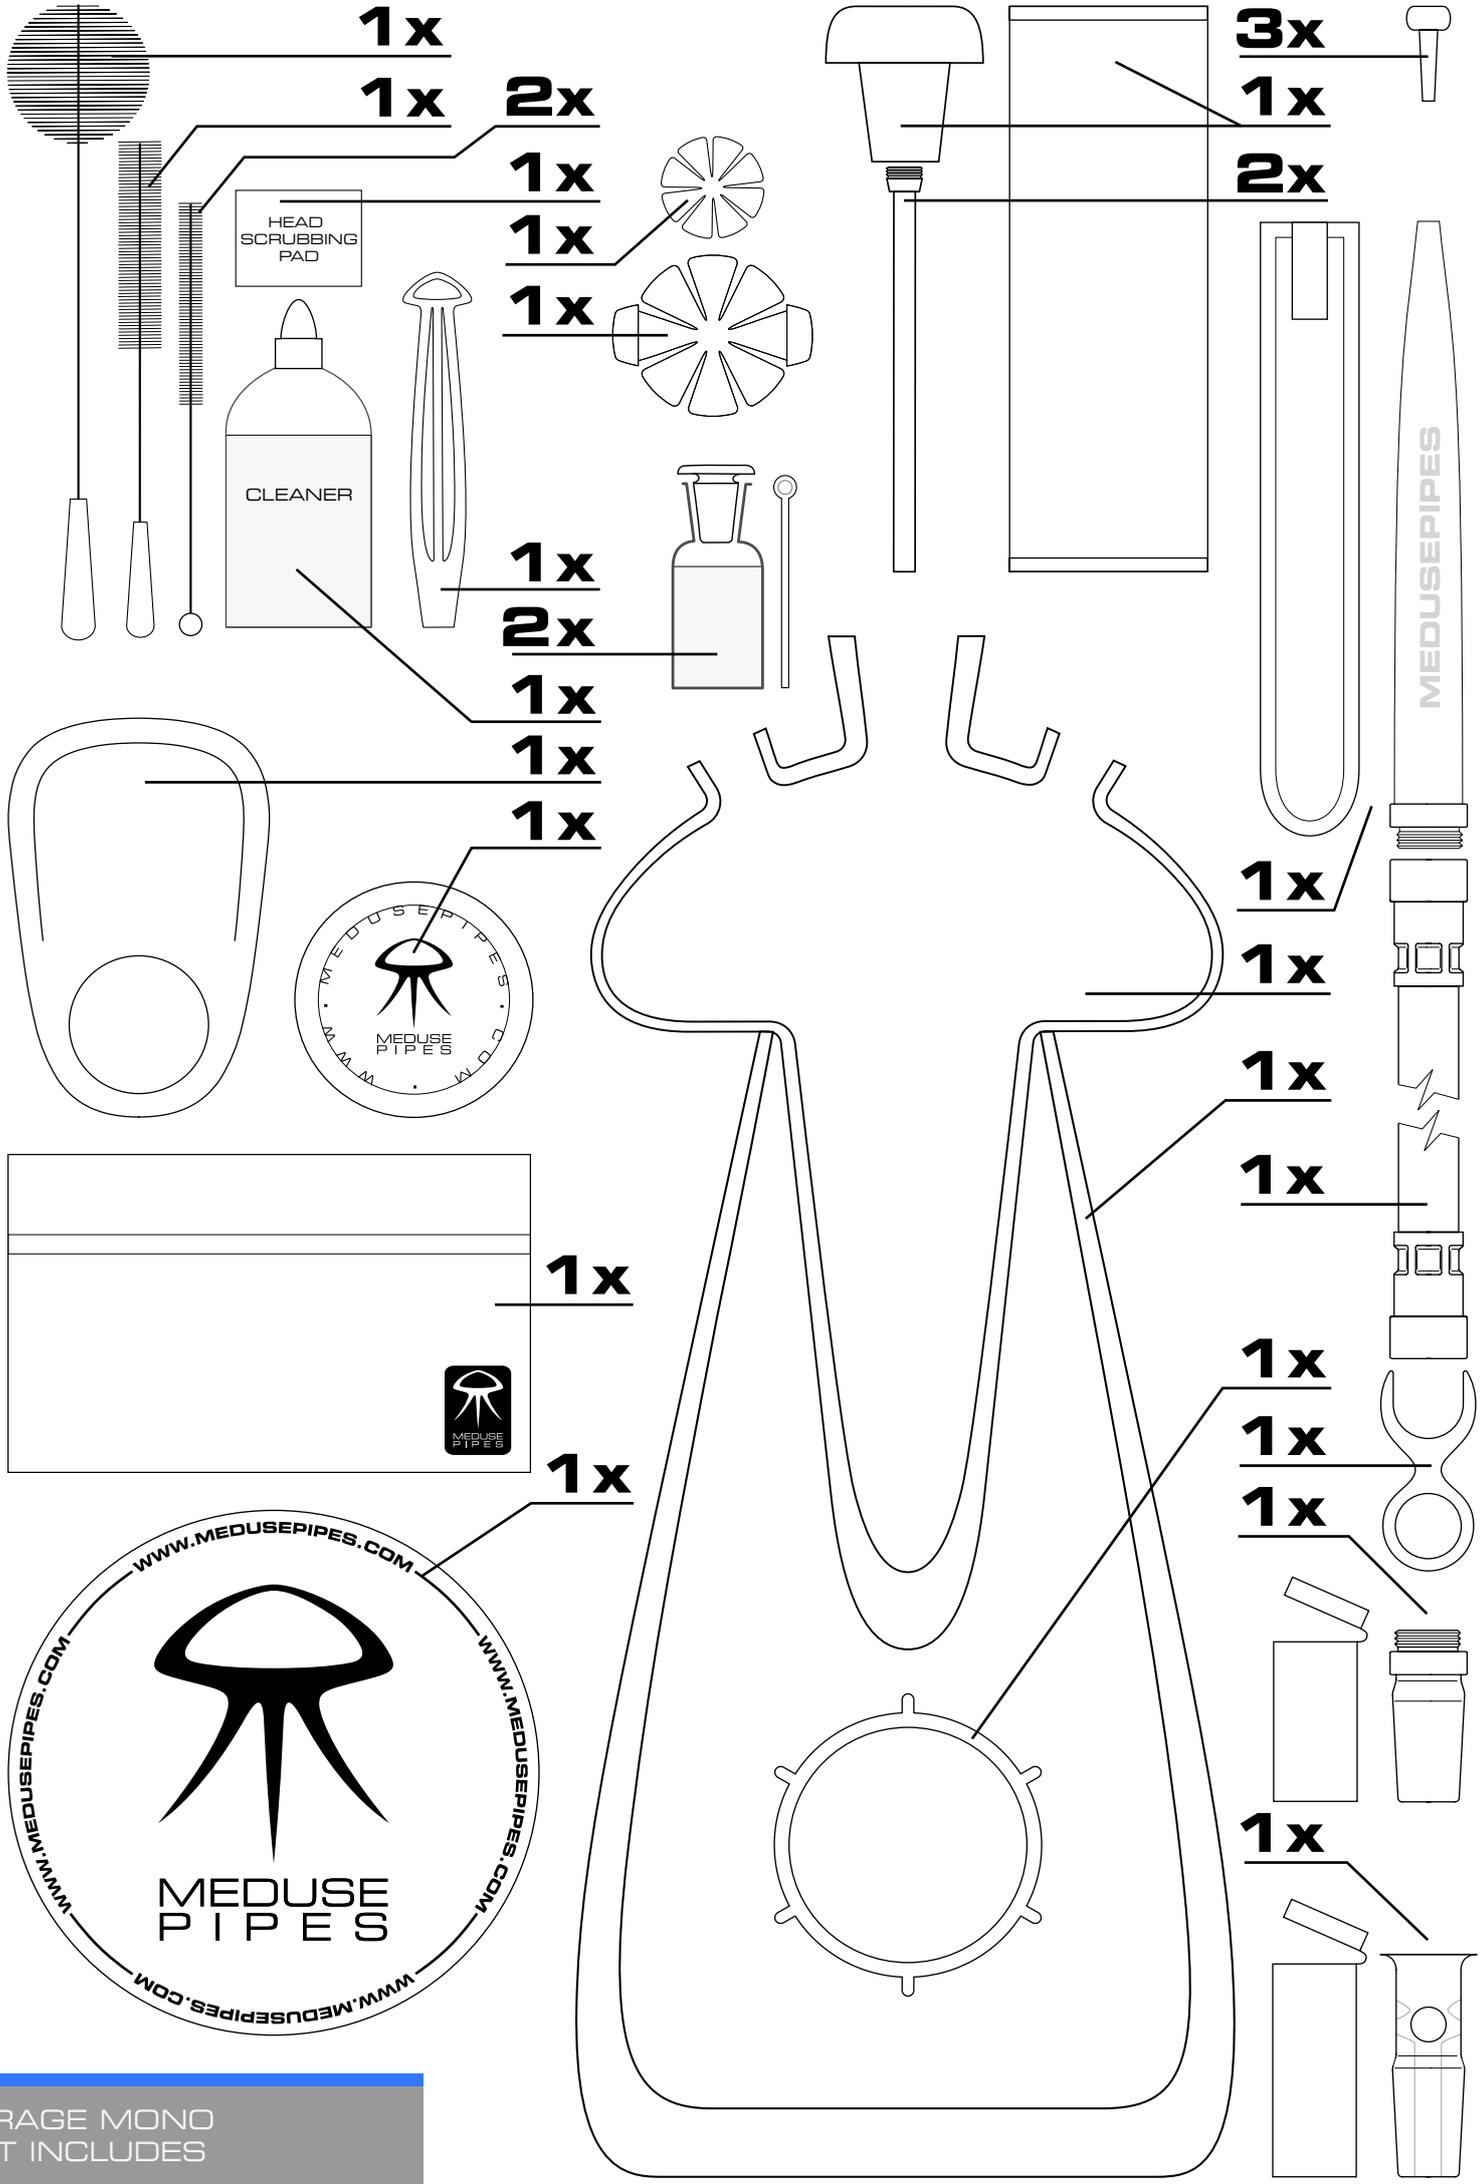

1x

1x

2x

1x

1x

1x

1x

2x

1x

1x

1x

1x

1x

3x

1x

2x

1x

1x

1x

1x

1x



1x

1x

1x

HEAD
SCRUBBING
PAD

CLEANER

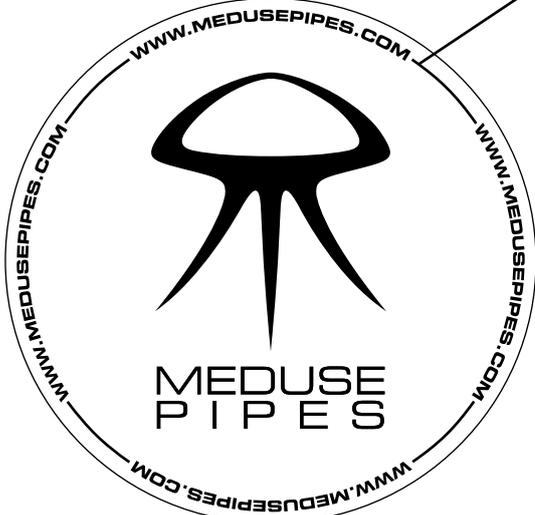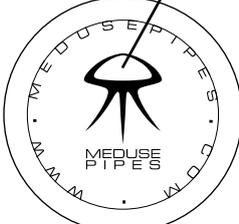

MIRAGE MONO
SET INCLUDES

